

INSTALLATION INSTRUCTION

Item# 14266-732

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPATION

1. Shut off the power at the fuse box or circuit breaker box. If necessary, remove the old fixture and all mounting hardware from junction box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any parts necessary for installation.

ASSEMBLING THE FIXTURE(Fig.1)

3. Thread the rod (K) into the coupling (L). Determine desired hanging height and thread rods (G, H, I, J) to the rod (K). Then thread the swivel (F) of canopy (D) onto rod (G). Pass wires carefully through each rod, swivel (F) and canopy (D).

MOUNTING THE FIXTURE (Fig.1)

4. Thread two mounting screws (C) (Size: #8-32*1.2" L) into crossbar (A) spaced same distance apart as holes in canopy (D). Length of mounting screws (C) into crossbar (A) may be adjusted if necessary. Attach crossbar (A) to junction box (Not included) using junction box screws (B) (Size: #8-32*0.6"). The side of crossbar (A) marked "GND" must face out.
5. The support cable is provided to support the weight of the fixture while wiring. Attach the hook (U) on the end of the support cable to the crossbar (A). Carefully allow the support cable to support the weight of the fixture while wiring.

CONNECTING THE WIRES (Fig.2)

6. Connect the electrical wires as shown in figure 2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the ground wires to it. Otherwise, connect the ground wire directly to the crossbar (A) and secure using the green screw provided.
7. Tuck wire connectors neatly into the junction box (not provided).

COMPLETING THE INSTALLATION (Fig. 1)

8. Slide the canopy (D) over the mounting screws (C) and secure with the cap nuts (E).
9. Slip the hole of plastic washer (N) over all thread (O), and secure with shade (M). Adjust shade (M) to proper position if necessary.
10. Place glass shade (Q) followed by metal ring (R) over socket (P). Secure with screw shell (S) using tool (T) (provided).
11. Install (8) eight candelabra base bulbs up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification. **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1

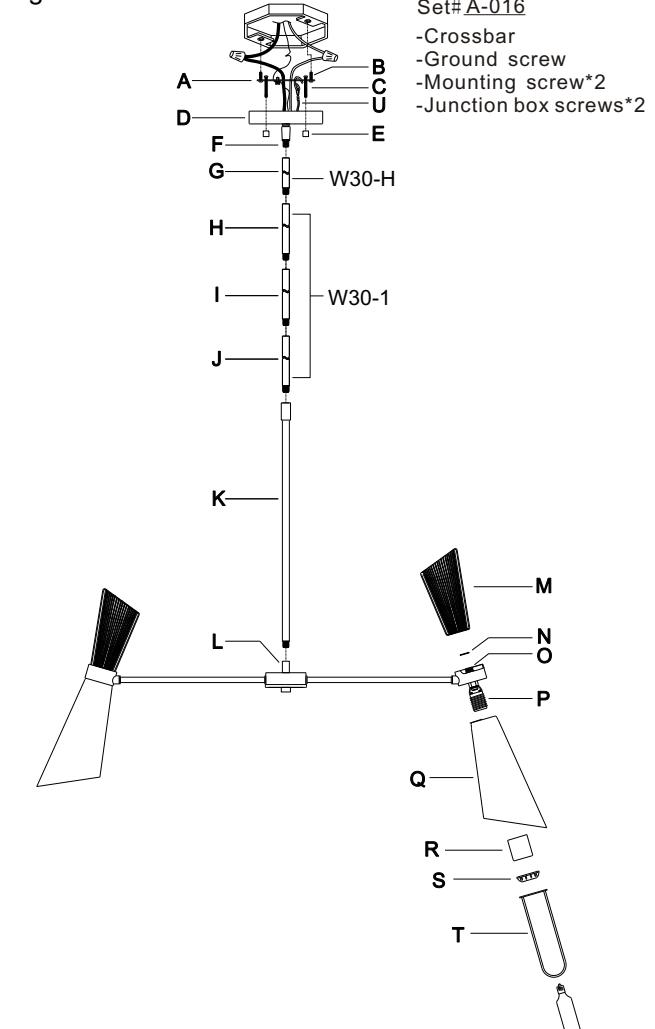


Fig.2

