

INSTALLATION INSTRUCTIONS FOR 10529-XXX-L

For LED CHANDELIER

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEUR

MOUNTING THE FIXTURE (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove the existing fixture and its mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Pull the upper housing of the fixture and adjust all arms (J) into equal part distribution.
4. Fixture includes three 12" and one 6" rods. Determine desired hanging height and thread rods (H1/H2) to all thread (I). Feed fixture wire carefully through each rod. If installing with one 6" rod only the all thread must be removed.
5. Secure rods (H1/H2) to the swivel of canopy (F).
6. Position the mounting plate (A) on the ceiling and mark the location of the four drywall anchors (C). Pre-drill the holes for the drywall anchors (C). Then insert the drywall anchors (C) into the ceiling.
7. Attach the mounting plate (A) to the junction box (not included) using mounting screws (C) (Size: 8-32*1/2"L). The side of the mounting plate marked "GND" must face out.
8. Place the wood screws (E) through the holes of the mounting plate (A) and lock into the drywall anchors (C) to secure the mounting plate (A) to the ceiling.

CONNECTING THE WIRES (Fig.2)

9. The red and black input wires from the led module are marked LED+ & LED-. There is a driver inside of canopy (F). Connect the red output wire (marked output+) from the driver to the red wire (marked LED+) from the LED module and the black one (marked output-) to the black wire (marked LED-) from the LED module. See Fig. 2, make sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the fixtures ground wire to it. Otherwise, connect the fixture ground wire directly to the mounting plate (A) using the green screw (B) provided.
10. Connect the white input wire from the driver to the white wire from the junction box. Connect the black input wire from driver to the black wire from the junction box. (Fig. 3)

FINISHING THE INSTALLATION (Fig. 1)

11. Align canopy (F) over mounting plate (A) and secure with screws (G).
12. Rotate the acrylic tube (L) into the arm (K).
13. Slide glass (M) (Size:D8"), metal fitting (N), glass (O) (Size:D6"), (in order "M-N-O-N-M-N-O" until the whole tube is filled) onto the acrylic tube (L) and secure with the finial (P). Do not over tighten.

Warning : The fixture is over 10 lbs. Please remove glasses before removing canopy from mounting plate to inspect wire connections in the future. This will allow you to hold the fixture body during wire connection or inspection or fixture removal.

Your installation is now complete. Return power to the junction box and test the fixture.

IMPORTANT: Fixture should be installed by a qualified electrician to ensure proper wiring and installation.

Dimmable with ELV and/or LED compatible wall dimmer switches.

Fig.1

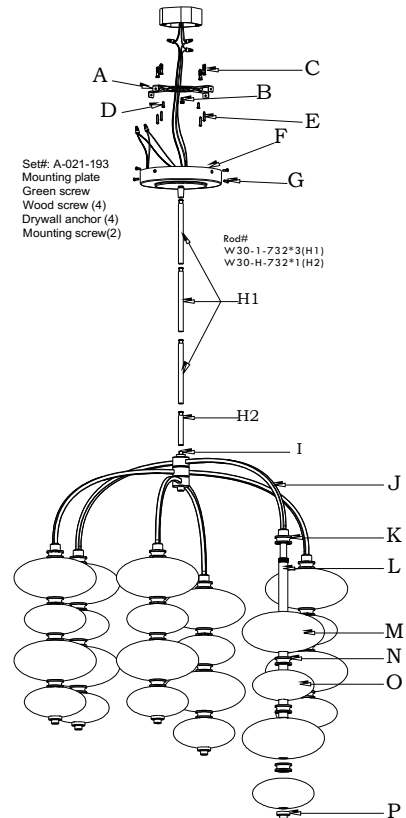


Fig.2

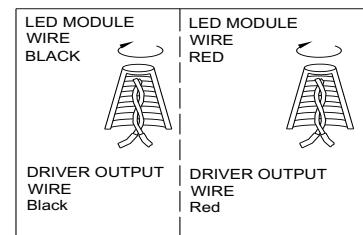


Fig.3

