

INSTALLATION INSTRUCTIONS

For Model 78502-877

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
3. Disassemble the pre-installed frame (H) from backplate (G) by loosening screws(I) & washers(J). Remove the package inside the frame(H) before installing.
4. Unscrew the mounting screws(F) to separate the mounting plate(B) from backplate(G).
5. Position the mounting plate(B) on wall and mark location of four holes on mounting plate where plastic anchors(E) will be inserted. Drill holes into wall and insert plastic anchors(E).
6. Attach mounting plate (B) to outlet box (A) (not included) with outlet box screws (C). (Size: #8-32*0.78" L). The side of the mounting plate(B) marked "GND" must face out. And install the four wood screws (D) into the plastic anchors (E).

CONNECTING THE WIRES (Fig. 2).

7. Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors are secured. If your outlet box (A) has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to the mounting plate (B) using green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

8. Align the fixture back plate(G) to mounting plate (B) and secure with mounting screws (F).
9. Install (2) two candelabra base bulbs (K) up to 60 watts or CFL or LED equivalent (not included) in accordance with the fixture specification. **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**
10. Secure the frame (H) back to backplate (G) by screws (I) & washers (J).
11. To prevent moisture from entering the outlet box (A) and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape. (Fig. 3)

Your installation is now complete. Return power to the junction box and test the fixture.

Replacing glass

- a. Shut off the power.
- b. To remove fixture from the wall
- c. Disassemble the pre-installed frame (H) from backplate (G) by loosening screws(I) & washers(J).
- d. Open glass clip(L) from frame(H), take off front glass(Y)/side glass(X).
- e. Place new front glass(Y) / new side glass(X) into frame(H), secure by glass clip(L).
- f. Secure the frame(H) back to backplate(G) by screws(I) & washers(J).

Fig.1

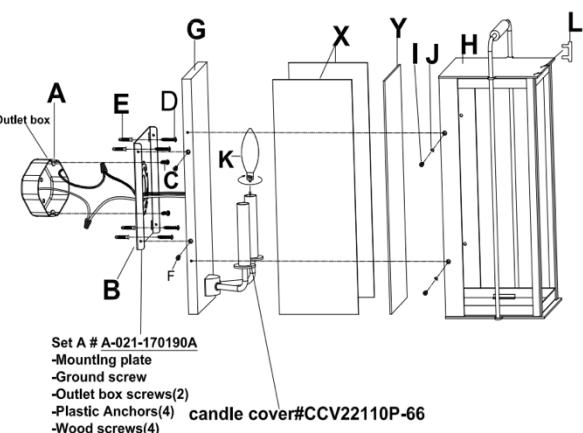


Fig. 2

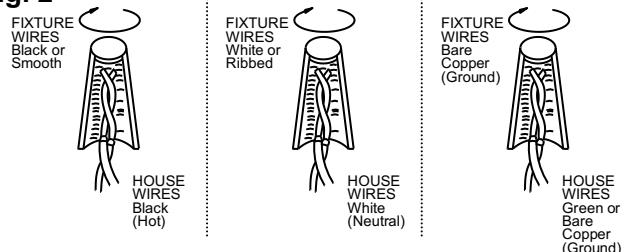


Fig. 3

